



Vacuum Cleaner

user manual

- * Before operating this unit, please read the instructions carefully.
- * For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register

SAMSUNG

Contents

IMPORTANT SAFETY INSTRUCTIONS.....	3
IDENTIFICATIONS OF PARTS	4
ATTACHING THE HANDLE.....	4
ATTACHING THE HOSE AND TOOLS	5
OPERATION	5
MAINTENANCE	8
TROUBLESHOOTING	11

IMPORTANT SAFETY INSTRUCTIONS

Thank you for purchasing a Samsung vacuum cleaner. When using an electrical appliance, basic precautions should always be followed, including the following :

PLEASE READ ALL WARNINGS AND INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING:

To reduce the risk of fire, electric shock, or injury :

- Do not leave vacuum cleaner unattended when it is plugged in.
- Unplug from outlet when not in use and before servicing.
- Do not use outdoors or on wet surfaces.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- If vacuum cleaner is not working as it should, or has been dropped, damaged, left outdoors or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull the cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not handle vacuum cleaner or plug with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair and anything that may reduce air flow.
- Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use without dirt cup or filters in place. Empty dirt cup and clean filter frequently when picking up very fine materials such as powder.
- Turn off all controls before unplugging vacuum cleaner.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible materials such as gasoline or fine wood, fine wood sandings or use in areas where they may be present.
- Store your vacuum cleaner indoors, in a cool and dry area.
- Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner.
- Always turn off this appliance before connecting or disconnecting the hose, removing the bottom plate for maintenance.
- Use only on dry, indoor surfaces, never change the plug in any way.
- Do not modify the polarized plug to fit a non-polarized outlet or extension cord.
- Do not touch the brush roller when it is rotating.
- Keep suction away from your face when using nozzles and pipe.
- Do not pull the power cord around sharp corners and do not allow it to be trapped.
- Unplug before connecting turbine nozzle.(only using turbine-brush model)
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

SAVE THESE INSTRUCTIONS


This vacuum cleaner is intended for household use only.

FOR RESIDENTS OF THE UNITED KINGDOM ONLY

If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

Assembling Parts

Identifications of parts

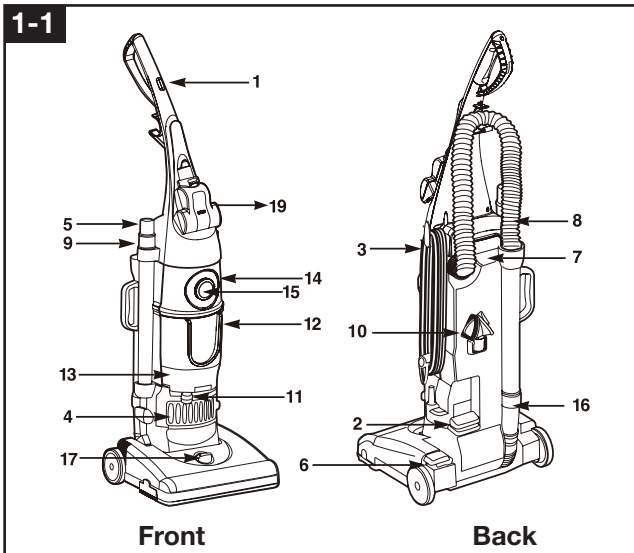


The assembled cleaner will look like the illustration to the left.

1. Handle
2. Power switch
3. Quick release cord hook
4. Post-Motor Filter
5. Crevice tool
6. Handle release
7. Carrying handle
8. Hose
9. Extension wand
10. Combination tool
11. Cyclone-Lever
12. Dirt Cup
13. Filter Cup
14. Upper Tank
15. Cap Cyclone
16. Hose Wand Base
17. Height Adjustment Dial
18. Hose Clip
19. Mini Turbo Brush


WARNING!

OPERATE THE VACUUM CLEANER ONLY AT THE VOLTAGE SPECIFIED ON THE NAMEPLATE.

Step 1. Attaching the Handle

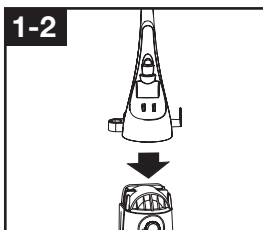


Stand the vacuum upright and slide the base of the handle firmly into the grooves at the top of the vacuum body.

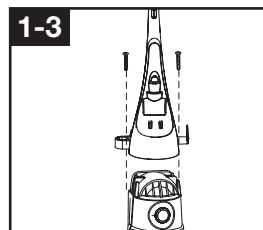


Insert the screw provided into the existing hole. Tighten the screw securely with a screwdriver. Before securing the handle, please check that the handle is fitted to the vacuum body and make sure there's no gap.

Assembling Parts


Step 2. Attaching the Hose and Tools

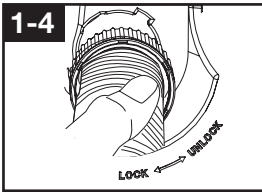


Line up the tabs on the base of the Twist Snap Hose with the corresponding notches on the hose collar as shown.

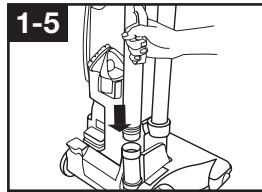

Slide the end of the hose wand with tabs into the Hose Wand Base.

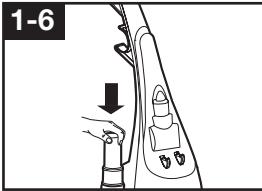


Slide the extension wand and the crevice tool together into the storage clip.

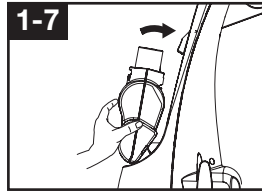


Attach the Mini Turbo Brush by putting the rib at the bottom of Mini Turbo Brush on two hooks of Handle. Snap Mini Turbo Brush into place as shown.

Operation

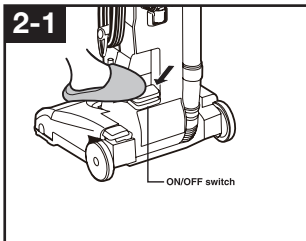


ON-OFF Switch

1. To turn cleaner on, press the Power switch.
2. To the cleaner off, press the Power switch again.

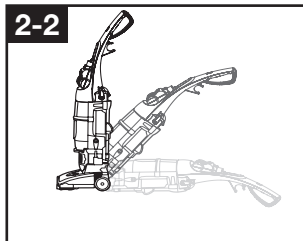

Handle positions


The handle of your cleaner has three positions; **upright** for storage and when using cleaning tools; **operating** for general operation on carpet and floors; **low** for reaching under low furniture. Step on handle release pedal to lower handle.

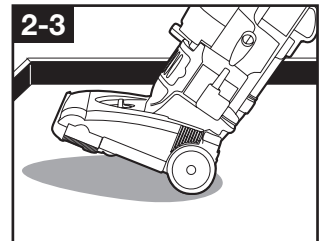

Transporting cleaner


To move your cleaner from room to room, put the handle in upright position, tilt the cleaner back on its rear wheels and push forward.

Operation

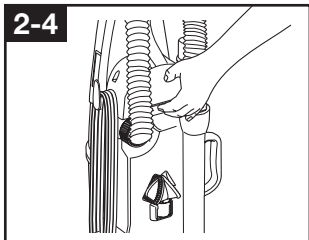

Carrying handle

The cleaner can also be moved by using the carrying handle.

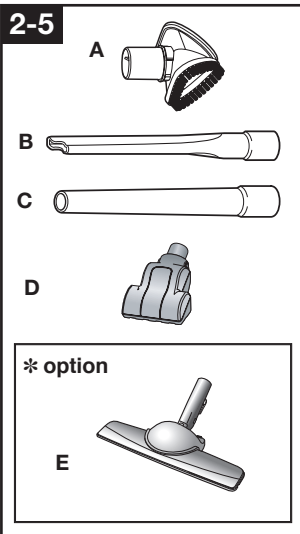

A. Combination tool:

Two types of cleaning tools are included in one attachment: rotate for desired tool.

- Use brush side to dust furniture, blinds, books, lamps, shelves.
- Use upholstery side for curtains, draperies, cushions, fabrics.

B. Crevice tool:

Use in corners, on stairs, baseboards, and behind furniture.

C. Extension Wand:

Use with desired attachments and narrow wand for a longer reach.

D. Mini Turbo Brush :

Use rotating brush action for small areas such as stairs and upholstery.

Note: Press gently when using Mini Turbo Brush to gain maximum cleaning. Too much pressure could cause the brush to stop rotating.

Cleaning Tool attachments

Attachment tools can be used to clean furniture or drapes, on stairs or in corners.


When using the attachments, ensure the vacuum cleaner is placed firmly on the floor with the handle in the upright position. Do not place the vacuum on top of furniture or steps as the brushroller may cause damage.

* option

E. Wooden Floor Brush (Select Models):


Use for bare floors. Swivel head turns to get into tight spaces and fits under cabinets.

Note: The Wooden Floor Brush does not store on board.

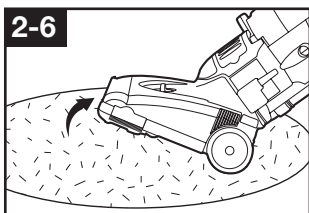

Cleaning lightweight flexible rugs

Stand on one end of rug and move cleaner toward other end or edge. Before reaching edge, push down on handle. This will lift up the nozzle(front of cleaner)and will prevent rug from clinging to cleaner. Continue to lift front of cleaner so that when you have reached the edge, it is completely off the rug. Move cleaner back to start again, lower front of cleaner, and use only forward strokes.

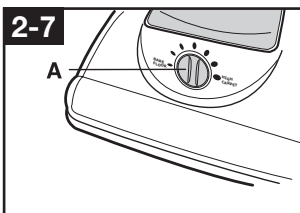

Height adjustment

1. Place handle in upright position
2. Turn height adjustment dial(A) to desired setting.

Bare Floor : For no-carpeted, bare floors.


Low Setting : For short pile carpets.

Medium Setting : For short and medium pile carpets.

Highest Setting : For plush pile carpet.

Note : For optimal cleaning performance, adjust to the lowest practical setting.

If your cleaner is difficult to push, adjust to the next higher setting. Always ensure that the correct height setting is used for your flooring type as damage may occur if the height setting is not changed to reflect your flooring type.


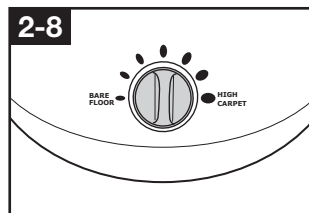


Operation






When using the hose attachment, please ensure that vacuum remains flat and level on the floor surface to prevent contact from the brush roller with the floor surface.

If the vacuum does not remain flat and level, this could result in damage to the flooring.

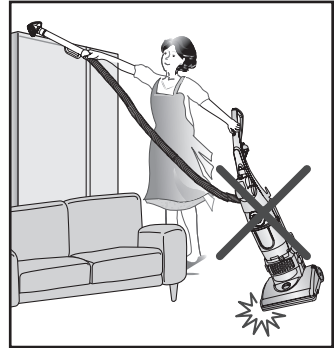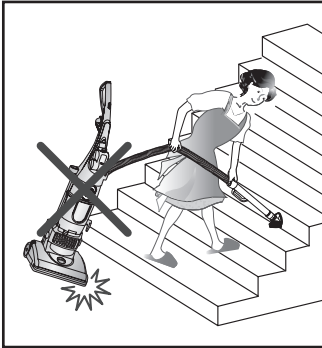

To reduce risk of injury and potential damage to floor surface, do not use the vacuum on a staircase.

Always use vacuum from the bottom of the staircase and ensure that the vacuum remains securely flat on the floor surface.

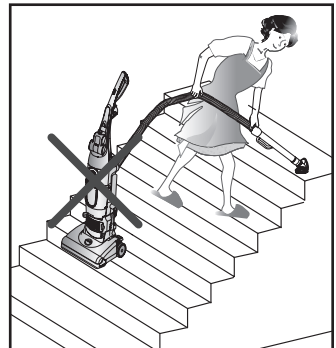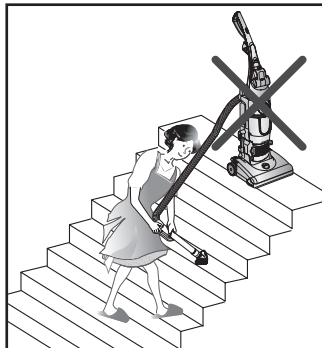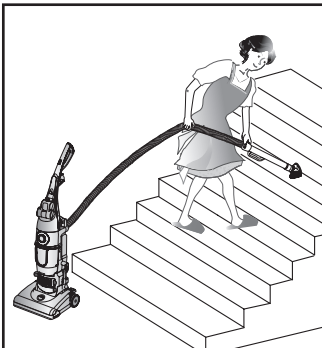

Maintenance

Familiarize yourself with these home maintenance tasks as proper use and care of your cleaner will ensure continued cleaning effectiveness.


When to empty the Dirt Cup

The dirt cup needs to be emptied when the dirt reaches the "MAX" line on the side of the Cup. If more dirt than this accumulates, your cleaner will not operate effectively.


Note: All new carpet has loose fibers which can fill the Dirt Cup quickly while vacuuming.

Emptying the Dirt Cup


Disconnect cleaner from electrical outlet.

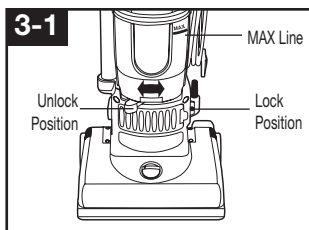

Slide the Cyclone-Lever to the "Unlock" position. Grasp handle and pull the Dirt Cup straight out to remove from Vacuum.

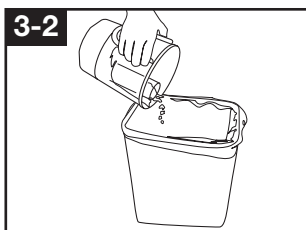


Empty dirt into garbage container. Put the Dirt Cup back in the vacuum and slide the lever to the "Lock" position.

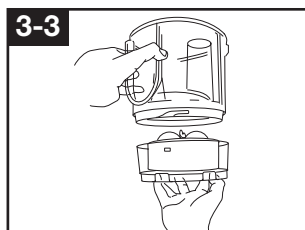

Cleaning The Circular Filters

Grasp the Filter Cup located at the bottom of the Dirt Cup and twist counterclockwise to unlock and remove.

Cleaning the Pre/Post-motor Filter

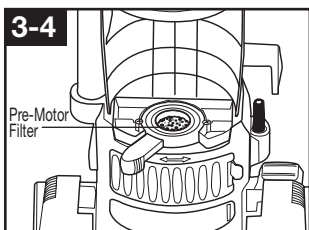


How to clean

Disconnect cleaner from electrical outlet.

The Pre-Motor Filter protects the Motor from debris.

It is located underneath the Dirt Cup and Filter Cup in the Center of the round part of the Cyclone-Lever.

Remove the small round Filter and any debris on top of it. Rinse well under warm water, then air dry thoroughly before replacing.

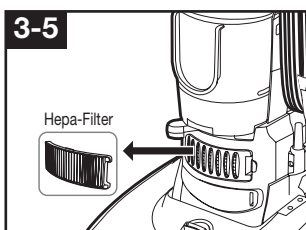

The Post-Motor Filter assists in the filtration process to return clean air to the room. It is located behind the door on the front of the Cleaner.


When the filter becomes dirty,

The Hepa-Filter :

Open the door, remove the filter and replace.

The Hepa-Filter is not washable and must be replaced.

Replace the door by inserting the tabs on the left side and snapping the right side into place.

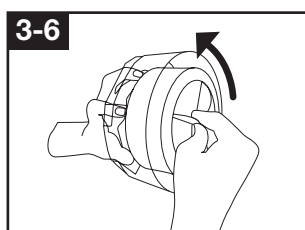

Grasp the Circular Filters and twist to unlock Pull straight up to remove.

Separate the Outer foam and Inner pleated Circular Filters.

Wash each individually by hand in warm water. Mild detergent may be used if desired.

Rinse well, then air dry Thoroughly dry before putting them back together and replacing in the Filter Cup The Filter Cup may be washed in warm water with a mild detergent. Make sure it is completely dry before reassembling with filters.

Do not operate cleaner without Either the Pre-Motor Filter or Post-Motor Filter in place.

Maintenance


The belt

The belt on your cleaner causes the agitator to rotate and is important for the effective operation of the cleaner. The belt is located under the bottom plate of the cleaner and should be checked from time to time to be sure it is in good condition.


When to replace

Disconnect cleaner from electrical outlet.


To check belt, remove bottom plate as shown in "How to replace." Replace belt if it is stretched, cut or broken.

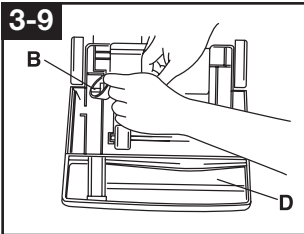

With lettering on outside of belt and positioned as shown in box on (D), slide new belt over motor pulley (B).

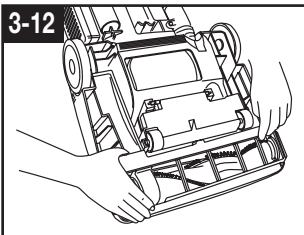


Reposition bottom plate and 4 screws. Tighten screws securely.

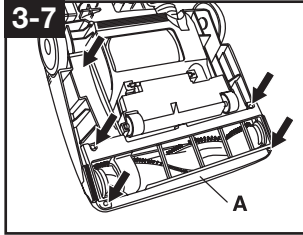

How to replace

Disconnect cleaner from electrical outlet.

Place handle in low position and turn cleaner over so bottom side is up. Remove the 5 screws as shown with a screw driver.

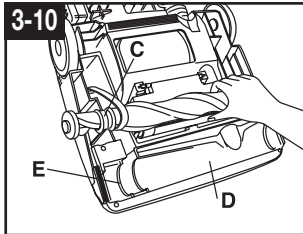

Insert agitator through belt and place belt in belt guide (C) on agitator.


Should the agitator shield (D) become dislodged while replacing the belt or the agitator, reposition it as shown, noting the placement of its belt guide (E).

When to replace the agitator brush roll


When agitator brushes are worn, the agitator should be replaced.

To check condition of brushes, disconnect cleaner from electrical outlet.


Move the edge of a card across bottom plate while turning agitator. To maintain cleaning effectiveness, replace agitator if brushes do not touch card.

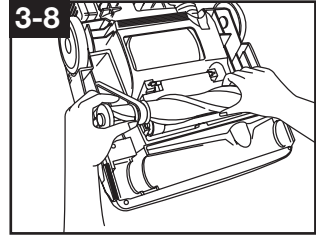

Remove agitator and used belt. Discard used belt.

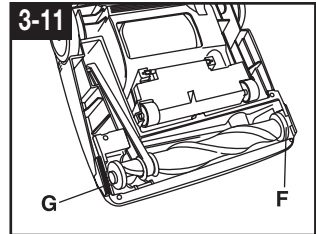

Grasp agitator firmly and fit it into position by first sliding the end opposite the belt into the rectangular slot (F) on side of cleaner. Pull other side of agitator (G) into place. Turn agitator, making sure belt is not pinched between agitator and agitator shield.

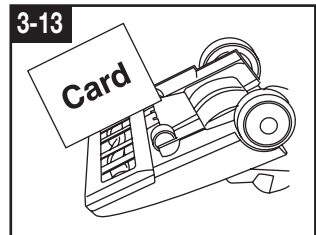

How to replace

Disconnect cleaner from electrical outlet.

Remove bottom plate, belt and agitator following directions in "The belt" section beginning with Fig. 3-10. Discard old agitator.


Continue following the directions in "The belt" section to reposition belt, new agitator and bottom plate.

Maintenance


Clearing Blockages

Disconnect cleaner from electrical outlet.


The hose on the back of the vacuum cleaner that carries the dirt from the nozzle to the Dirt Cup can sometimes become clogged. If you notice a change in the sound of the vacuum motor, check for blockages.

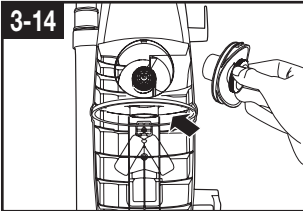

Check Upper Tank and Grille Cyclone. To open the Cap, grasp the holder and turn Toward the left. If the Grille was blocked, check and clear the grille in the center of the Cyclone.

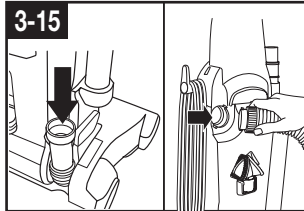


Remove the Hose and disconnect the Wand. Check for clogs in the vacuum base, the wand, the hose and the suction inlet.

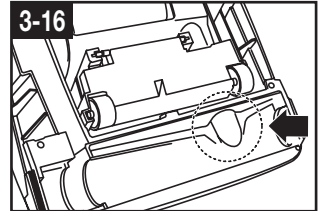

If the blockage persists, turn the vacuum cleaner off and unplug it. Remove the bottom plate. Lift up the short hose in the base of the vacuum. Inspect the hose for clogs and remove any obstructions. Replace the short nozzle hose and the bottom plate.


Mini Turbo Brush

Use for upholstered furniture, carpeted stairs and hard-to-reach places.

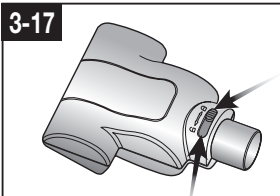


Brush bar Replacement


Remove the tool from the hose, and turn upside down. Slide the switch to unlock position.

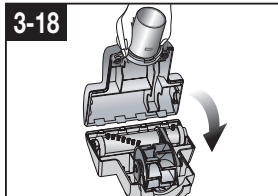

Remove bottom plate. And remove brushbar and discard. Inspect belt to ensure that it is in good condition. If broken or cracked, please replace. (See below for details.)

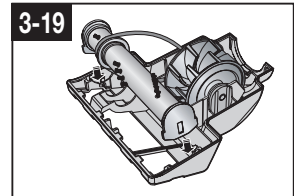


With the curved ends facing down, slide end plates of brushbar into slots on the tool. To replace bottom plate, insert the four tabs on edge of bottom plate into slots on front of tool. Pivot bottom plate down and snap closed.

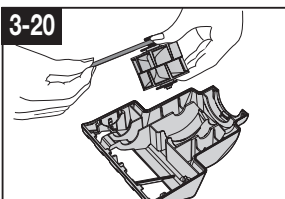


Belt Replacement

Grasp turbine and pull firmly to remove. Remove belt from turbine pulley. Replace with new belt.

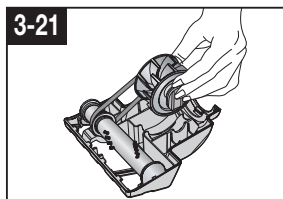

With flat sides of turbine retainers pointing down, slide retainers into grooves in tool housing and snap into place. Replace brushbar and bottom plate.

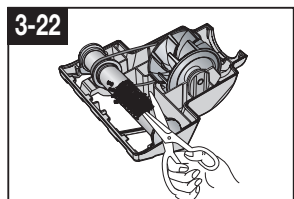

Cleaning Brushbar

- Cut off pet hairs or threads surrounding brush by using scissors.

Troubleshooting

Check this list of possible problems and solutions before bringing your vacuum to a service center.

Problem: Cleaner won't run

Possible Cause

Possible Solution

- **Not firmly plugged in**
· Plug unit in firmly
- **No voltage in wall plug**
· Check fuse or breaker
- **Blown fuse or tripped breaker**
· Replace fuse or reset breaker
- **Filters blocked or dirty**
· Clean filters as per manual instructions

Problem : Dust escapes the Dirt Cup

Possible Cause

Possible Solution

- **Dirt Cup improperly installed**
· Re-install the Dirt Cup.

Problem : Cleaner hard to push

Possible Cause

Possible Solution

- **Incorrect carpet height setting**
· Rotate nozzle control knob to lower setting

Problem : Poor job of dirt pickup

Possible Cause

Possible Solution

- **Full or clogged Dirt Cup**
· Empty the Dirt Cup and check for blockages.
- **Broken or worn belt**
· Replace belt.
- **Clogged hose or nozzle**
· Clean hose or nozzle area.
- **Hole in hose**
· Replace hose.
- **Dirt Cup improperly installed**
· Properly install the Dirt Cup
- **Incorrect carpet height setting**
· Rotate nozzle control knob to lower setting
- **Clogs in air flow passage**
· Clear clogs/clean filters as per manual instructions

Problem : Abnormal sound

Possible Cause

Possible Solution

- **Strange sound like rushing air**
· Check for clogs in hose, nozzle area and or filters, clear or claen any clogs or blockages as per manual instructions

This Vacuum cleaner is approved the following.

Electromagnetic Compatibility Directive: 2004/108/EEC

Low Voltage Directive: 2006/95/EC

If you have any comments or questions regarding a Samsung products, contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
U.K	0330-SAMSUNG (726-7864)	www.samsung.com
SOUTH AFRICA	0860 7267864 (SAMSUNG)	www.samsung.com

